

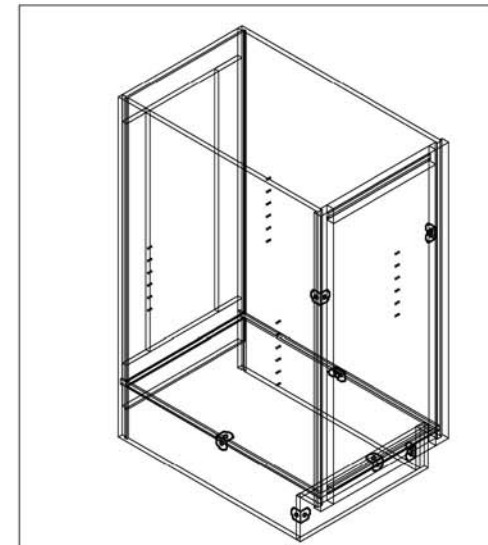
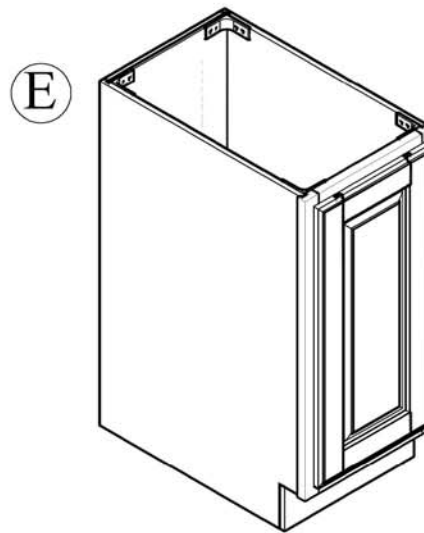
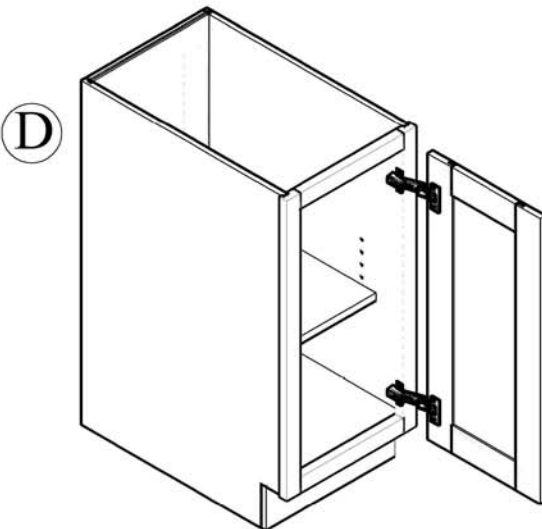
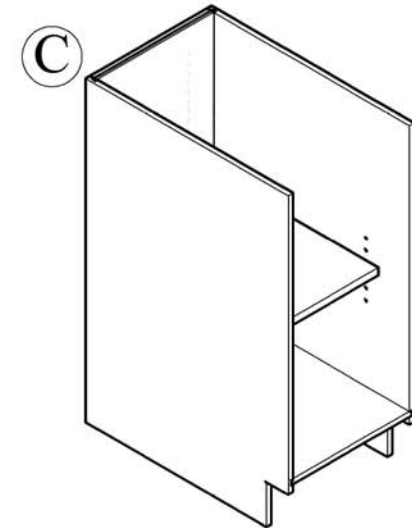


TB09/B09FHD/B12FHD/B15FHD/B18FHD/B21FHD

ASSEMBLED INSTRUCTION

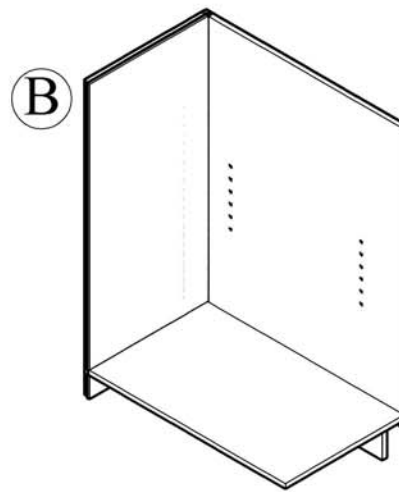

Corner brace: 4
Screws 1.4cm:16

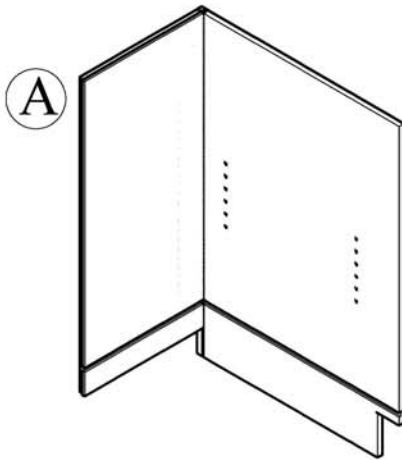

Bumper:2



Screws 1.6cm:4
Screws 2.0cm:2
Screws 2.5cm:2



Shelf support: 4



Small Corner brace: 7
Screws 1.4cm:14

