

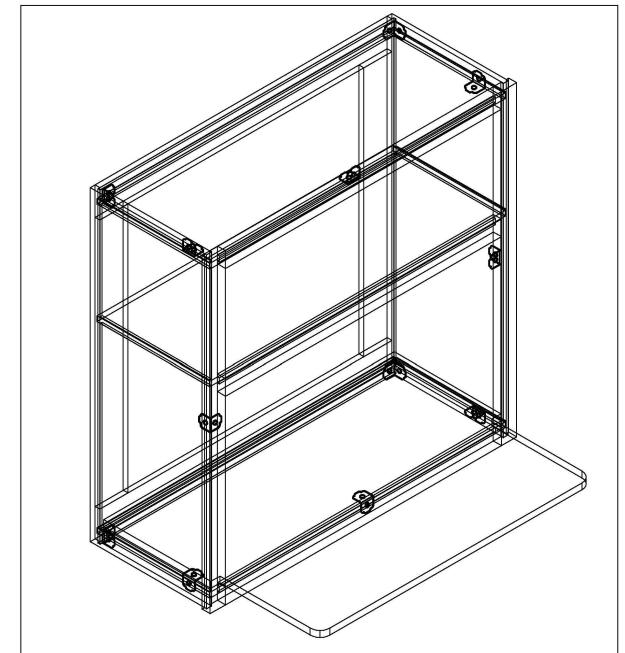
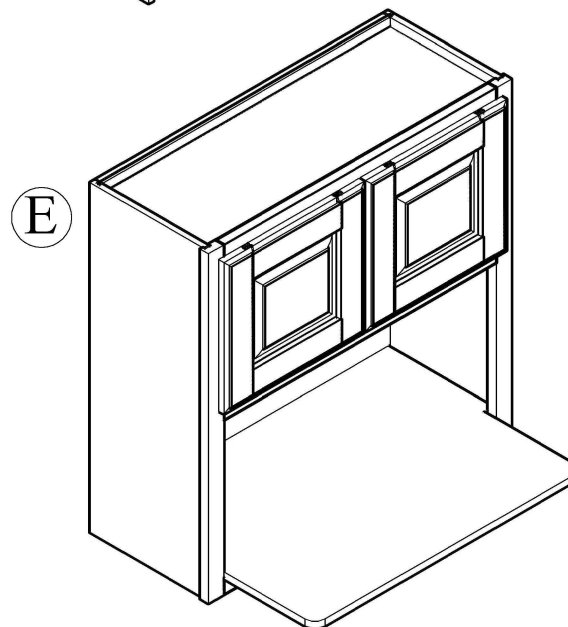
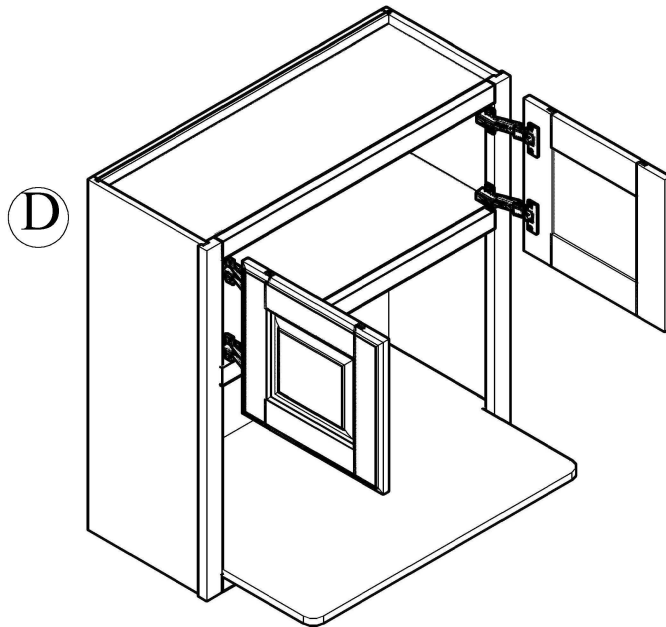
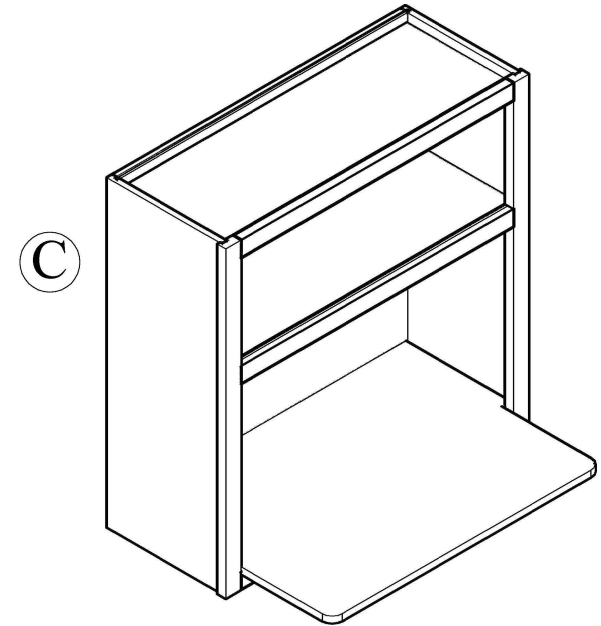


WM3030/WM3036/WM3042

ASSEMBLED INSTRUCTION

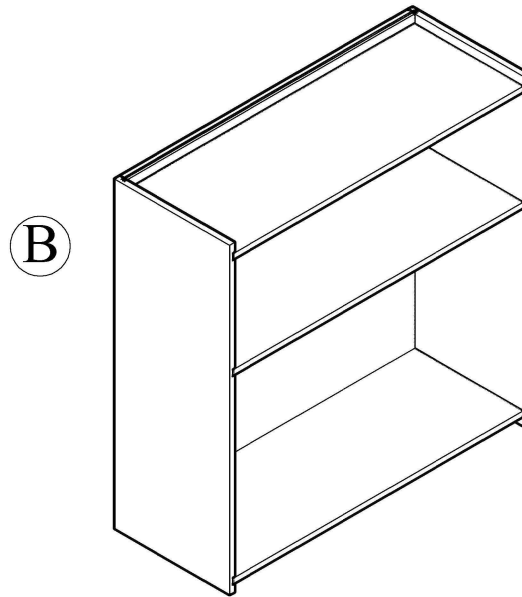

Small Corner brace:12
Screws 1.4cm: 24

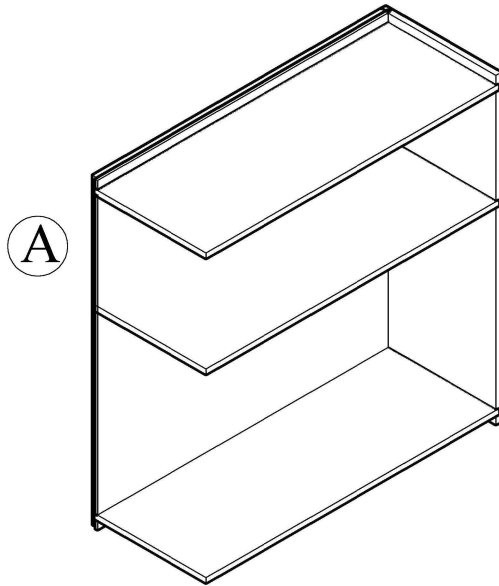

Screws 1.6cm: 8
Screws 2.0cm: 4
Screws 2.5cm: 9



Bumper:4

